



Merlin Gage Initializing New EPROM (after repair of upgrade)

(1) Make sure the gage is attached to power.


(2) Press and hold the 'SETUP' key. While holding the 'SETUP' key, turn the power switch on. Continue holding the 'SETUP' key for a few seconds, then release. This is the 'SETUP' mode. After you see the SETUP Screen come up, DON'T PANIC! The screen may look a little funny. Odd characters, big long numbers, and strange text. This is normal after an EPROM CHANGE and we are about to fix it.

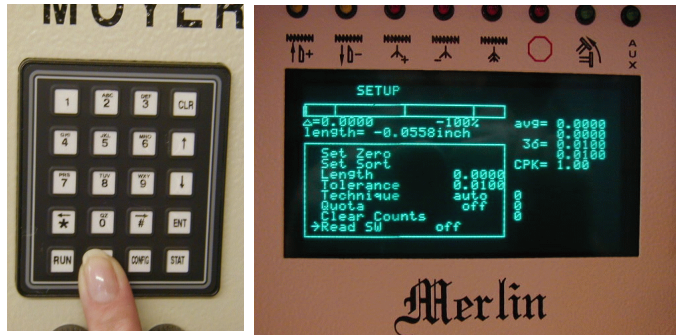


(3) Press and hold the 'CONFIG' key for about ½ second. Press the up arrow key one time to move the cursor to the bottom of the screen. This is the 'language' entry. Clear and reset each menu item in this menu, starting with language first. Set the gage for each of it's 6 languages, finishing on your language of choice. (see suggested screen)

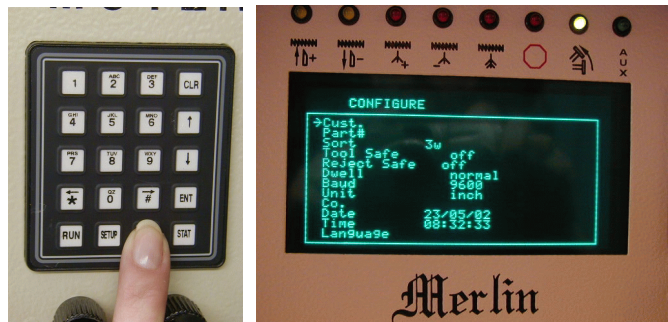

(4) Press and hold the 'STAT' key for about ½ second. Clear and reset each menu item in this menu, no special order. (see suggested screen)

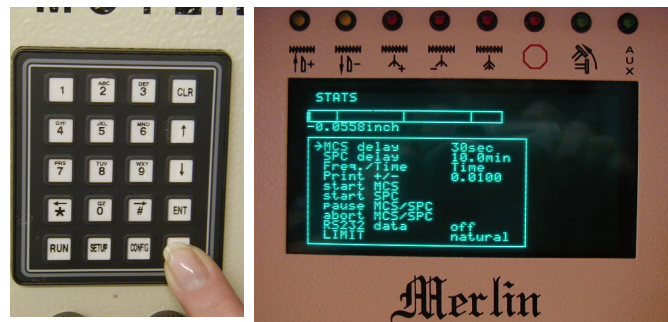

(5) Press and hold the 'SETUP' key for about ½ second. Clear and reset 'technique'. Set '% tol' for 25% and leave technique in 'auto' mode. (see suggested screen)

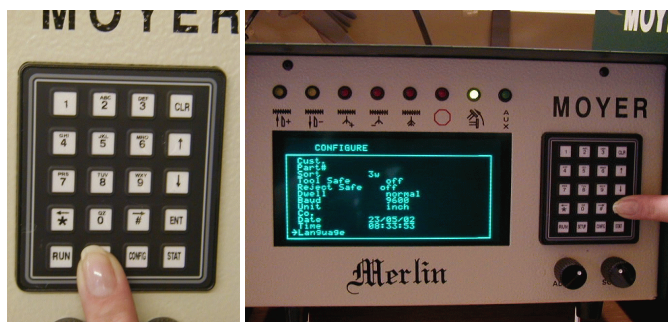

Please contact Moyer at 260-495-2405 in the USA, if you have any questions or problems. Info@moyercompanies.com
May 27, 2002